

# LTPF-120VAC INTERFACE CARD

for ALLEN-BRADLEY PowerFlex70 Adjustable Frequency AC Drives

## INSTALLATION DIAGRAM



**ATTENTION: To prevent electrical shock, disconnect from power before installing or servicing.**

